 


INSPIRED

by **Bassett**[®]

 
Tradition Reinvented

Item# BP-YSBK30-W3
YESLER BOOKCASE
ASSEMBLY INSTRUCTIONS

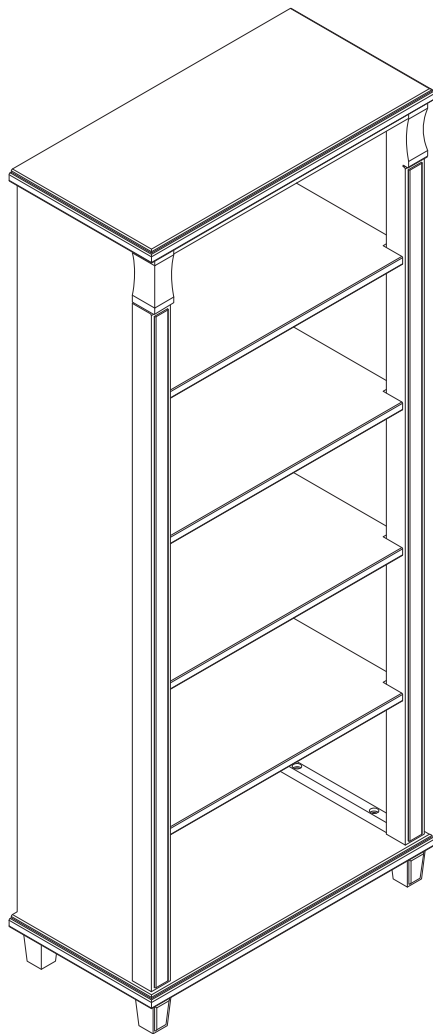

IF PARTS ARE MISSING OR DAMAGED, DO NOT RETURN TO STORE

To order missing or replacement parts, contact us via e-mail parts@officestar.net, by Fax 1-909-930-5629, or toll free parts number 1-800-950-7262, Monday through Friday 8:00 a.m. - 5:00 p.m. Pacific Time.

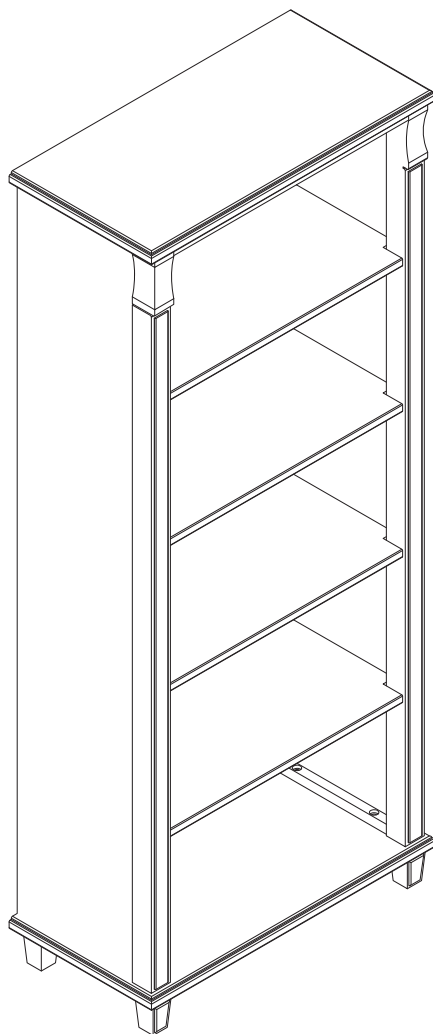

WARNING

1. Do not use this product unless all screws and bolts are securely tightened.
2. Check that all screws and bolts are tight every three months or as needed.
3. Dispose of packing material properly. Do not use plastic cover as head covering. It may cause suffocation.
4. Do not use this product as a stepladder.
5. Use this product for its intended purpose only.
6. **Intended for residential use only.**

 
LIMITED WARRANTY

INSPIRED by Bassett® Warrants, to the original purchaser its products to be free from defects in material and workmanship for a period of 5 years. Defects and damage from misuse, abuse, negligence, alteration, accident, vandalism, rusting, acts of nature or any other event beyond the control of INSPIRED by Bassett® is not covered. The warranty does not cover cosmetic damage that may result from normal use. Liability for incidental or consequential damages is excluded. The user assumes all risk of injury resulting from use of this product. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

To make a warranty claim, contact Customer Service, provide model number, sales receipt and description of the problem. It is the customer's responsibility to prepay freight on any components returned to the factory. INSPIRED by Bassett® will pay return freight on components covered under terms of warranty.

Contact us via e-mail parts@officestar.net, by Fax 1-909-930-5629, or toll free parts number 1-800-950-7262, Monday through Friday 8:00 a.m. - 5:00 p.m. Pacific Time.

PARTS LIST

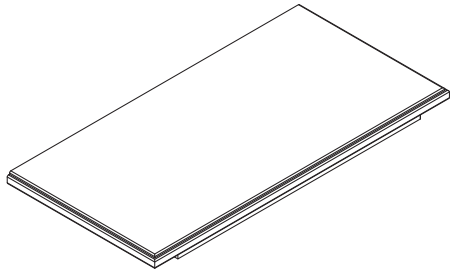


(1) TOP PANEL (1 PC)




(2) LEFT SIDE PANEL (1 PC)



 (3) RIGHT SIDE PANEL (1 PC)

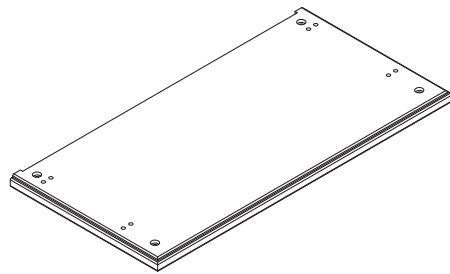

 
(4) BOTTOM PANEL (1 PC)

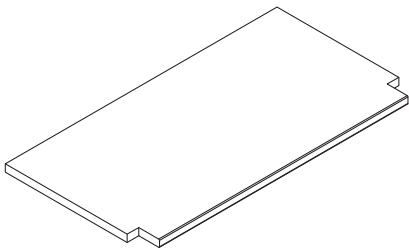


(5) ADJUSTABLE SHELF (4 PCS)



  (6) BACK PANEL (1 PC)

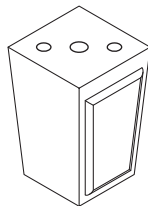




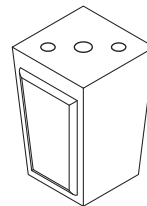



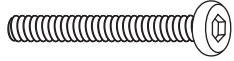


(7) Foot A (2 PCS)



(8) Foot B (2 PCS)

HARDWARE LIST

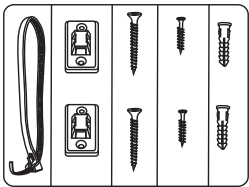NO	SKETCH	DESCRIPTION	SIZE	Q'TY
A		BOLT	ϕ1/4" X 1-1/2"	4 PCS+ 1 EXTRA
B		BOLT	ϕ1/4" X 1"	8 PCS+ 1 EXTRA
C		FLAT WASHER	ϕ1/4" X 16 mm	4 PCS+ 1 EXTRA
D		FLAT WASHER	ϕ1/4" X 12 mm	8 PCS+ 1 EXTRA
E		SPRING WASHER	ϕ1/4"	12 PCS+ 2 EXTRA
F		WRENCH	4 mm	1 PC
G		WOOD DOWEL	ϕ8 X 30 mm	16 PCS+ 2 EXTRA
H		SCREW	M3 X 15 mm	30 PCS+ 3 EXTRA
I		SHELF SUPPORT		16 PCS+ 2 EXTRA
J		TIPPING RESTRAINT HARDWARE KIT	SCREW M4 X 30 mm 2PCS SCREW M3 X 20 mm 2PCS	1 SET

NOTE: Phillips screwdriver also needed for assembly (not provided).

 
THANK YOU for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts and hardware lists.

Contact us via e-mail parts@officestar.net, by Fax 1-909-930-5629, or toll free parts number 1-800-950-7262, Monday through Friday 8:00 a.m. - 5:00 p.m. Pacific Time.

STEP 1:


Insert two Wooden Dowels (G) into each Foot A (7). Secure one Foot A (7) to each bottom corner of Bottom Panel (4) using one Flat Washer (C), one Spring Washer (E) and one Bolt (A) for each Foot A (7). **FULLY TIGHTEN BOLTS (A) USING WRENCH (F).**

NOTE: Repeat Step for Foot B (8).

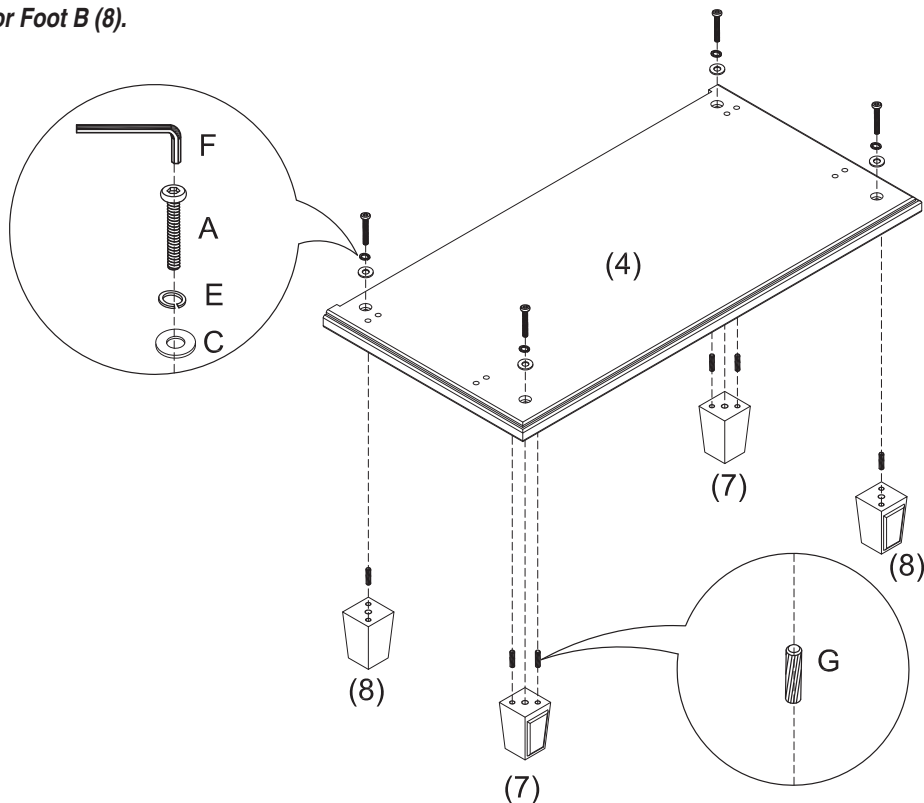


STEP 2:

 Insert two Wooden Dowels (G) into each end of Left Side Panel (2) & Right Side Panel (3). Secure Left Side Panel (2) & Right Side Panel (3) to Bottom Panel (4) using two Flat Washers (D), two Spring Washers (E) and two Bolts (B) for each side panel. **DO NOT FULLY TIGHTEN BOLTS (B).** Secure Top Panel (1) to Left Side Panel (2) & Right Side Panel (3) using two Flat Washers (D), two Spring Washers (E) and two Bolts (B) for each side panel. **FULLY TIGHTEN ALL BOLTS (B) USING WRENCH (F).**

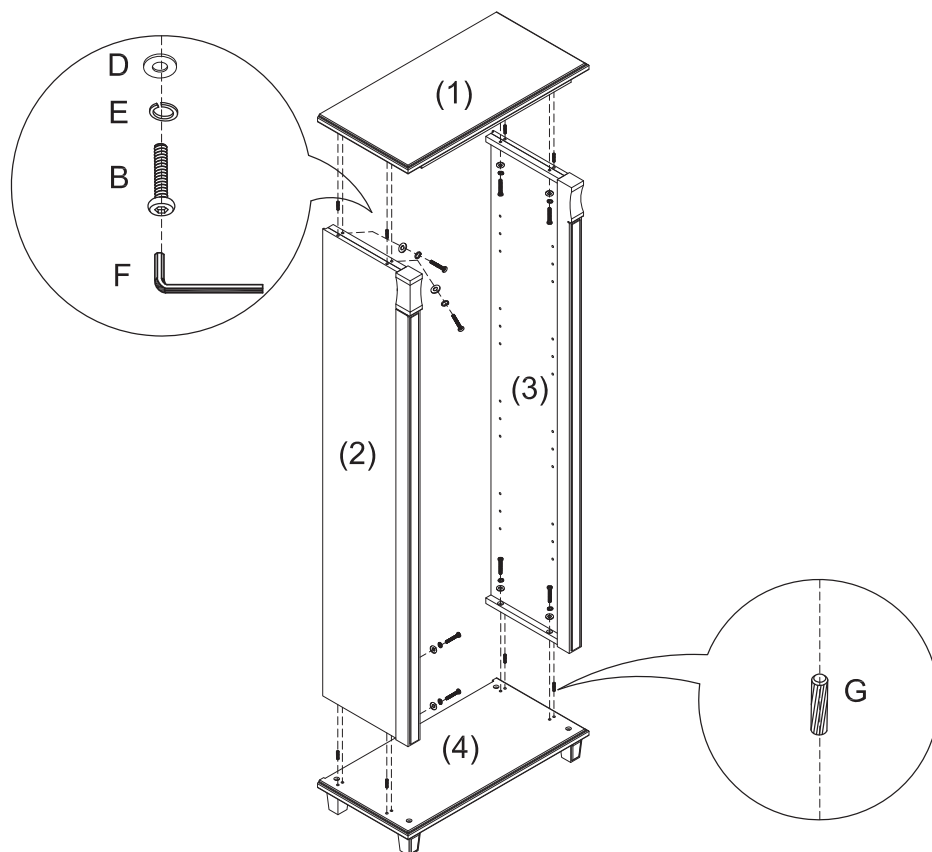


STEP 3:

 Secure Back Panel (6) to rear of assembly using thirty Screws (H). **FULLY TIGHTEN ALL SCREWS (H) USING PHILLIPS SCREWDRIVER (not provided)**

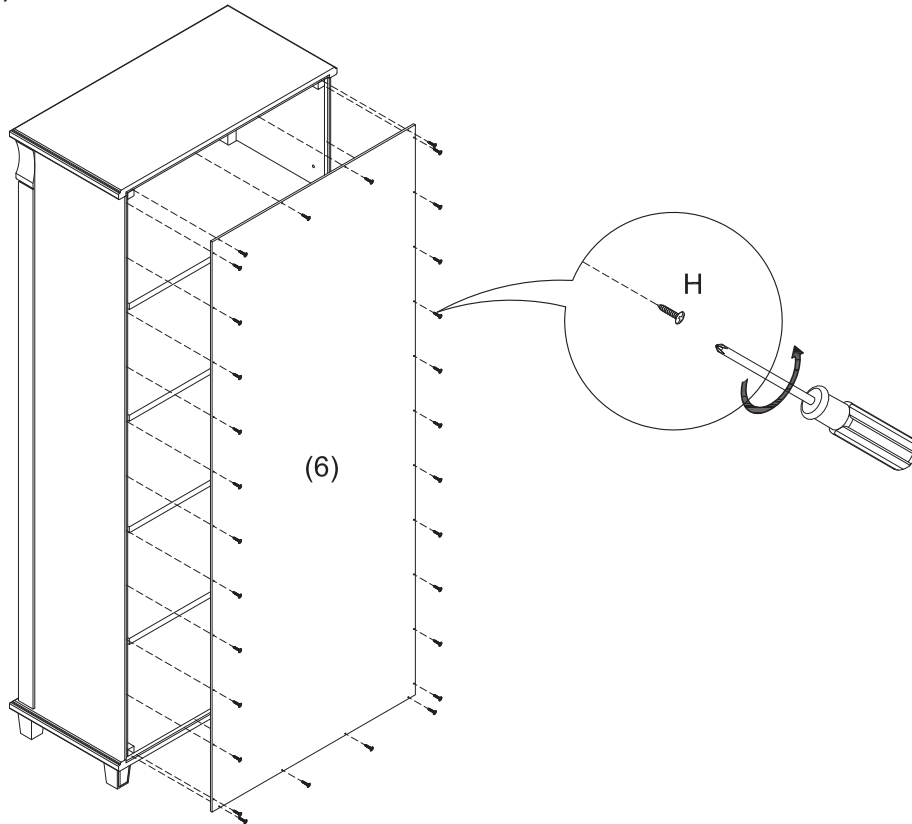

STEP 4:

Insert eight Shelf Supports (I) into each side of Bookcase. Carefully place Adjustable Shelves (5) onto Shelf Supports (I).




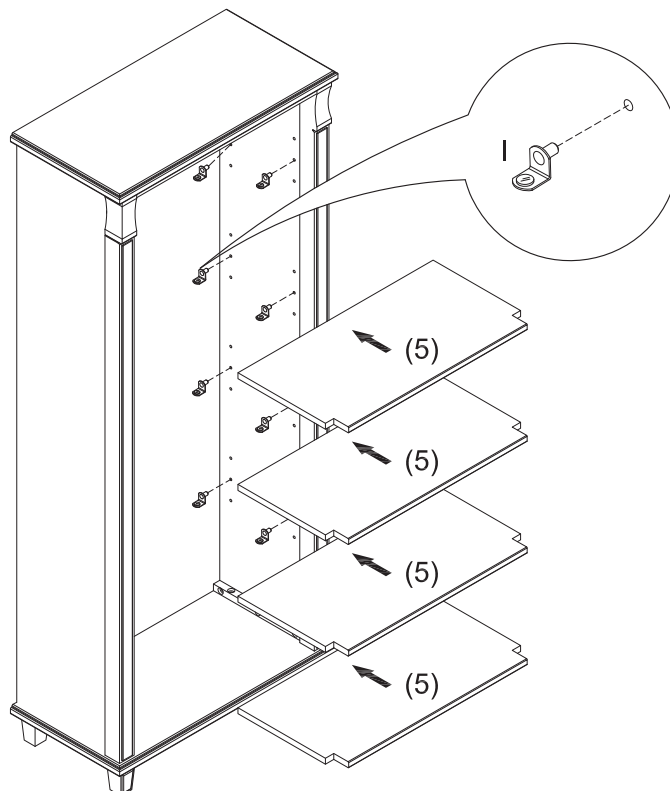



TIPPING RESTRAINT KIT INSTALLATION

STEP 1:

Place bookcase in desired location. Secure one Bracket to rear of Top Panel (1) using two Screws (M3x20mm). Secure one Bracket to wall using two Screws (M4x30mm). Loop Safety Strap through Brackets to secure bookcase into position.

NOTE: Use Anchor if securing to drywall.

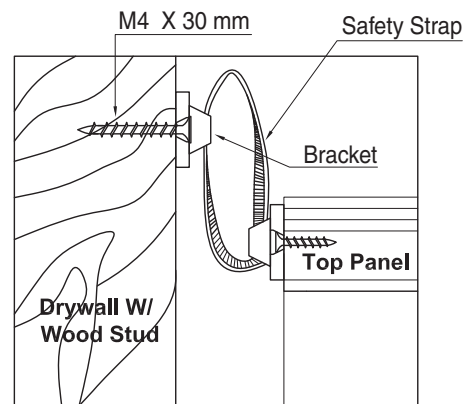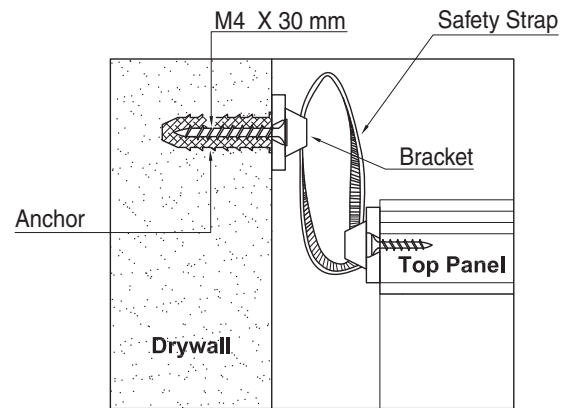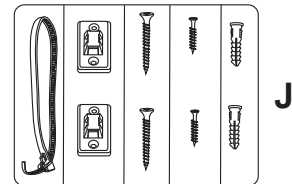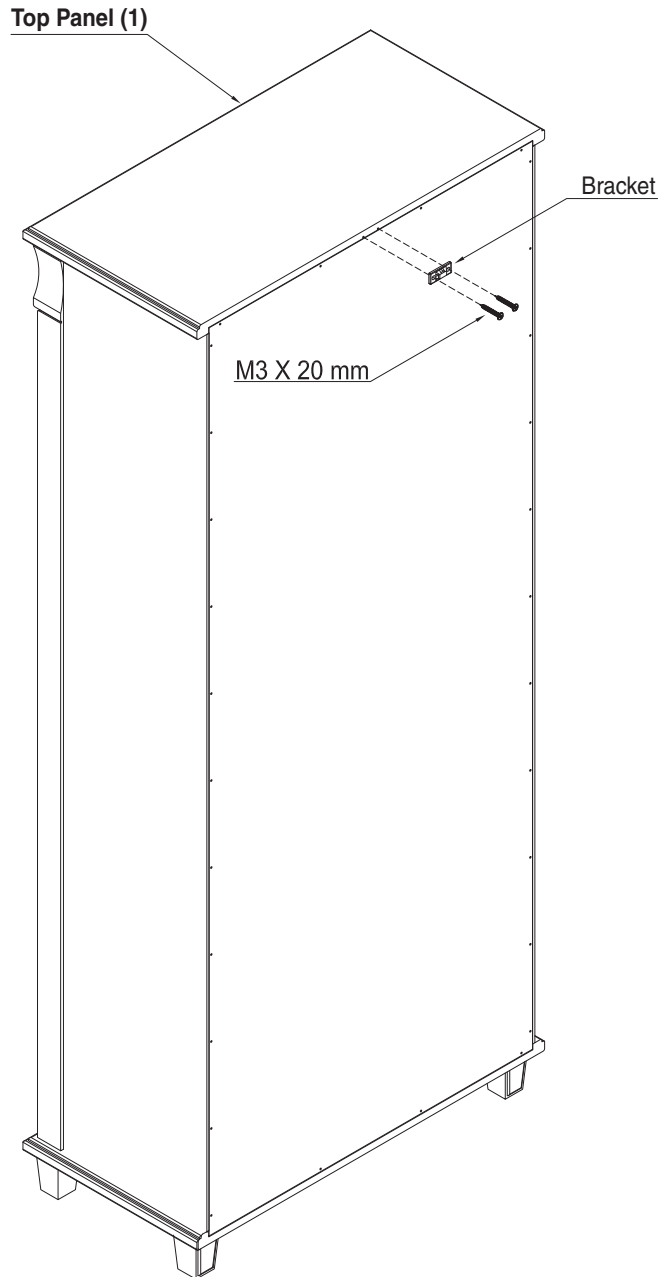

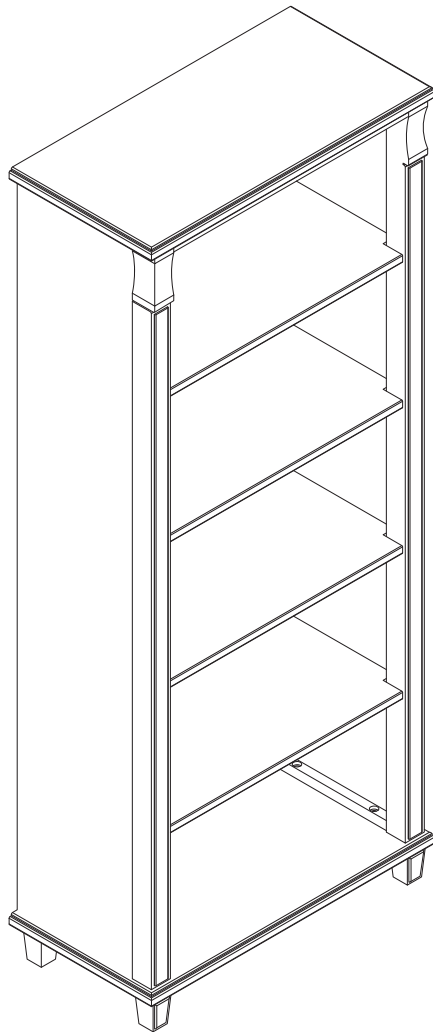

FURNITURE CARE:

- Dust with a soft cloth following the grain pattern of the wood.
- Dust often to remove the everyday abrasive particles from the wood surfaces.
- Before dusting, moisten cloth lightly with a spray product.
- Wood finishes also benefit from an occasional polishing.

Contact us via e-mail parts@officestar.net, by Fax 1-909-930-5629, or toll free parts number 1-800-950-7262, Monday through Friday 8:00 a.m. - 5:00 p.m. Pacific Time.